47580 rev5_Layout 1 08/11/2013 10:04 Page 1

CM47580 MUK Rev5

morphy richards

Accents Espresso

2 YEAR GUARANTEE

Please read and keep these instructions for future use

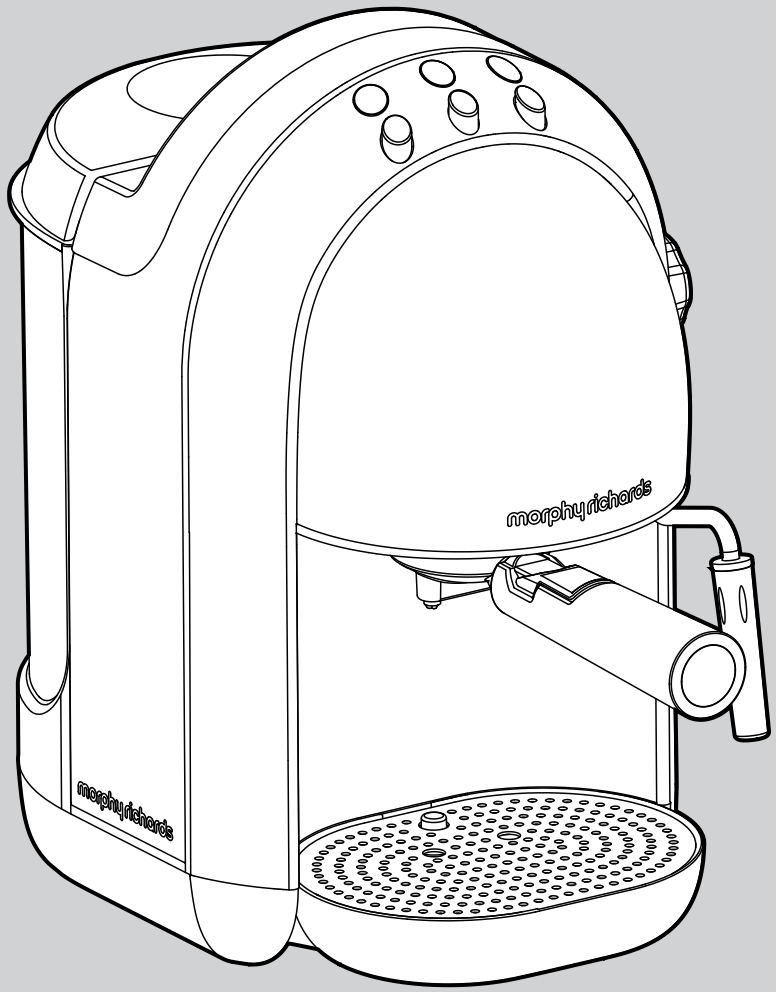

For competitions, product hints and tips and more join us at
www.morphyrichards.co.uk/blog

www.facebook.com/morphyrichardsuk

@loveyourmorphy

www.morphyrichards.com

* Register online for your 2 year guarantee. See back of this instruction book for details (UK and Ireland customers only).

Health and Safety

The use of any electrical appliance requires the following common sense safety rules.
Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilites, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and it's cord out of reach of children.
- This appliance is intended to be used in household and similar applications such as: farm houses,by clients in hotels, motels and other residential type environments, and bed and breakfast type environments. It is not suitable for use in staff kitchen areas in shops, offices and other working environments.

Location

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or near water.
- WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not let the mains cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.

Personal safety

- WARNING: To protect against fire, electric shock and personal injury do not immerse cord, plug and appliance in water or any other liquid.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.
- Do not move the coffee maker while switched on.

Other safety considerations

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not use the appliance for any use other than its intended purpose.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- WARNING: The appliance must not be immersed for cleaning.
- CAUTION: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and detergent.

Electrical requirements

Should the fuse in the mains plug require changing, a 13 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

Product overview

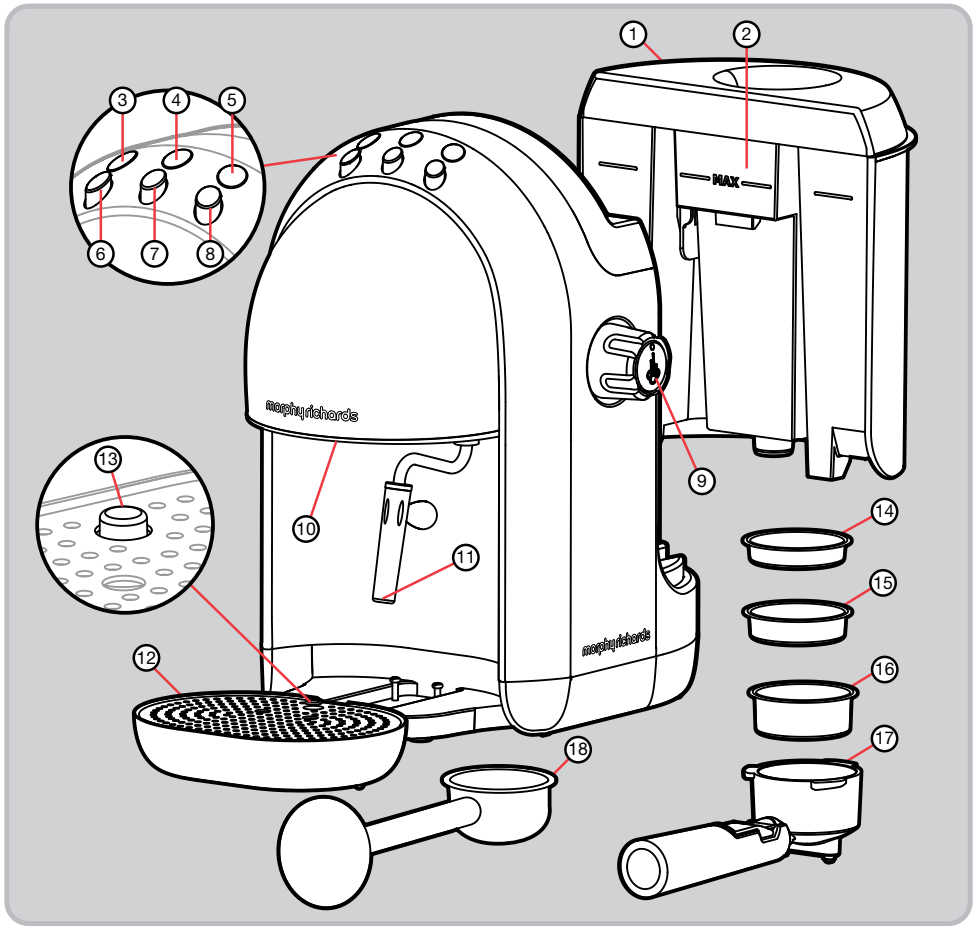

Features

(1) Water Tank Lid
(2) Water Tank
(3) Coffee Ready Light
(4) On/Off Light
(5) Steam Ready Light
(6) Coffee Dispense Button
(7) On/Off Button
(8) Steam Button
(9) Steam Control
(10) Brewing Head
(11) Steam Wand (with cover)
(12) Drip Tray (with removable grid)
(13) Drip Tray Full Indicator
(14) E.S.E. Pod Filter
(15) 7g Coffee Filter (for single shot use)
(16) 14g Coffee Filter (for double shot use)
(17) Filter Holder
(18) Tamp Spoon

Using Your Coffee Maker

Your Accents Espresso uses ground coffee or Easy Serving Espresso (E.S.E.) pods and comes with three suitable Filter Holders. The 7 g Filter Holder **(15)** is for single shot use and the 14g Filter Holder **(16)** is for double shot use. Use the E.S.E. Pod Filter **(14)** when using E.S.E. pods - a compact coffee pod with a paper filter covering.

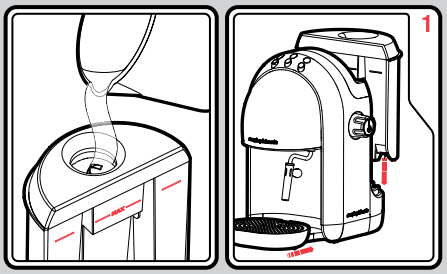

Assemble the Accents Espresso as above. Fill the Water Tank up to the MAX line, (1.25L)

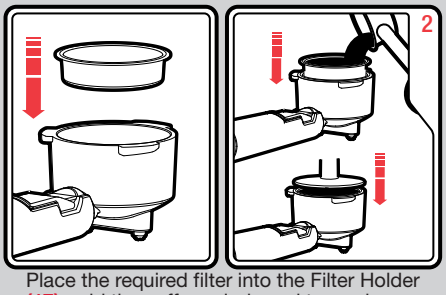

Place the required filter into the Filter Holder **(17)**, add the coffee grinds and tamp down, alternatively insert the E.S.E. pod.

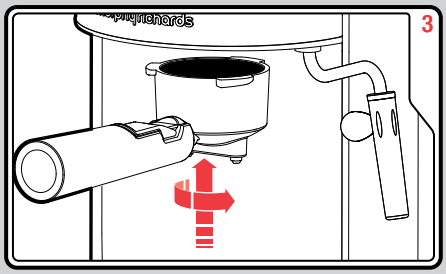

Place the Filter Holder into the Brewing Head and turn to lock into position.

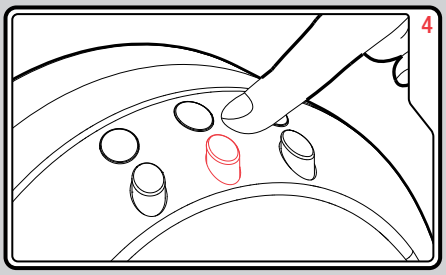

Plug the Accents Espresso in and press the On/Off button **(7)** wait for the Ready Light to illuminate. **(3)**

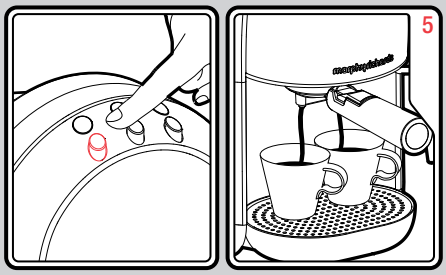

When the Accents Espresso is ready, place cups on the Drip Tray and press the Coffee Dispense Button **(6)**.

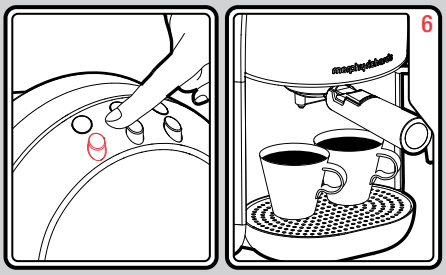

Press the Coffee Dispense Button **(6)** again to stop the coffee.

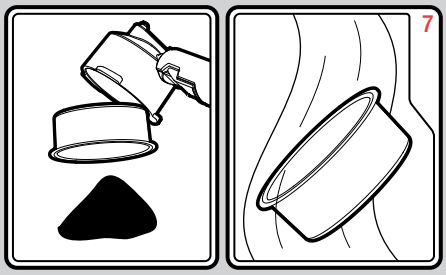

Allow the grinds/pod to cool. Empty the coffee grinds/ E.S.E pod, remove the Filter from the Holder and clean.

Using the Steam Wand

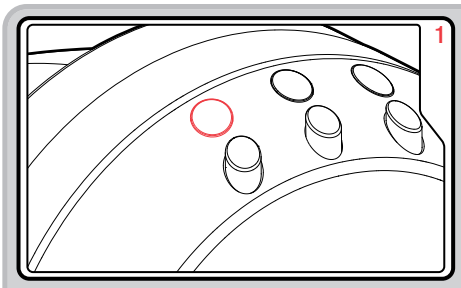

Fill the Water Tank and press the On/Off Button **(7)**. Wait for the Ready Light to illuminate **(3)**.

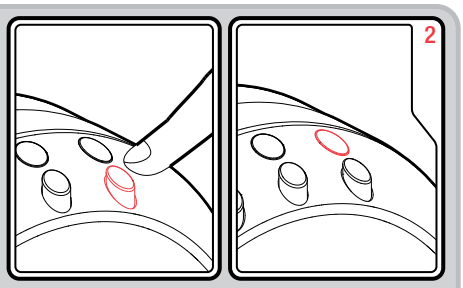

Press the Steam Button **(8)**, wait for the Steam Light **(5)** to illuminate.

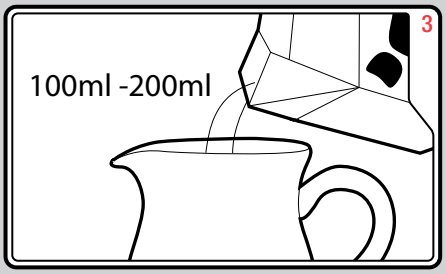

Pour 100-200ml of chilled milk into a jug.

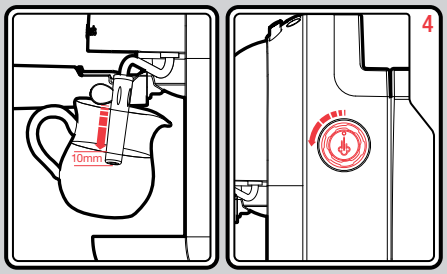

Place the Steam Wand **(11)** into the milk, slowly turn the Steam Control **(9)** to on.

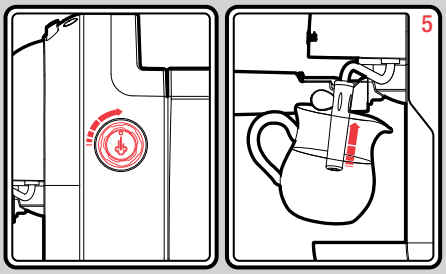

When enough froth has been produced, turn the Steam Control to off.

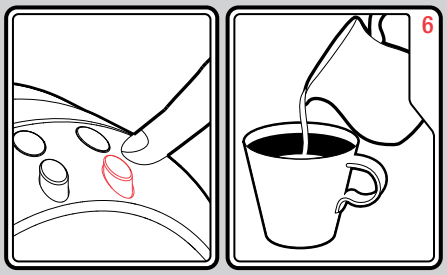

Press the Steam Button to exit the steam function. Serve the frothy milk.

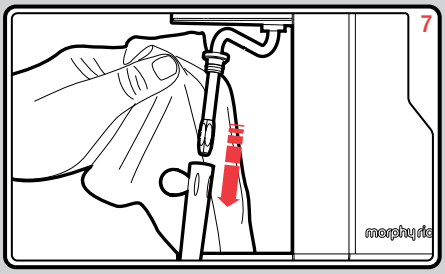

To clean, remove the wand cover and use a wet cloth to clean the wand and cover.

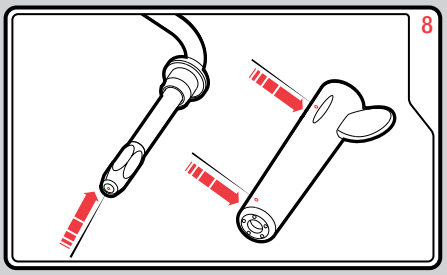

Use a pin to clean the nozzle head and air holes in the cover.

WARNING

WHEN FROTHING MILK ENSURE THE STEAM CONTROL IS OFF BEFORE REMOVING THE WAND FROM THE MILK.

Emptying the Drip Tray

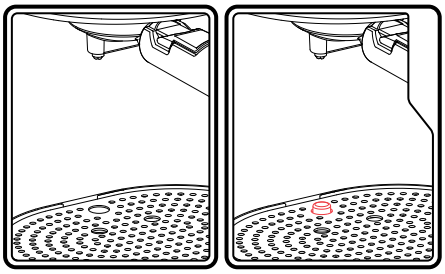

When the water in the Drip Tray is full, the Empty Drip Tray Full Indicator **(13)** will be visible

1. Remove the Drip Tray from the appliance and empty.
2. Clean the Grid and Drip Tray with a damp cloth before replacing.

Cleaning your Accents Espresso

1 Disconnect the appliance from the mains supply.

2 Make sure the appliance has completely cooled down.

3 Simply wipe the Steam Wand and exterior with a clean, damp cloth.

Do not use any abrasives or metal scourers as this will damage the finish on the unit.

4 The Filter Holder and Water Tank should be washed after each use by rinsing them under water. To assist in keeping the Filter Holder clean we recommend you periodically run the machine with the Filter Holder in place, without coffee, using water only.

Should the holes in the filter become blocked with coffee grinds, use a fine bristled brush to help clean.

When your coffee maker is not being used, we recommend that you do not leave the filter holder attached to the machine as this will reduce the life of the gasket.

5 Remove the Drip Tray Grid and Drip Tray from the appliance and remove any spilt coffee and water then clean them with a damp cloth or a damp sponge.

6 You must clean the Steam Wand and cover immediately after each use, after it has cooled down. Place the Steam Wand in a jug or mug and use the steam setting to clear any remaining milk out of the Wand and Cover.

Remove the Steam Wand Cover, place under warm running water to remove excess milk. If the Steam Wand becomes blocked, use a small pin to clean more thoroughly.

WARNING: Steam from the Steam Wand is extremely hot and can scald.

IMPORTANT: Never wash your coffee machine accessories in a dishwasher.

Descaling

1 Disconnect the appliance from the mains supply.

2 Make sure the appliance has completely cooled down completely.

3 Remove the Water Tank and Drip Tray from the machine.

4 Fill the water tank with dissolved citric acid solution, up to the max level marked on the side of the tank.

5 Re-fit the Water Tank and Drip Tray to the machine.

6 Place an empty container under the brewing head to gather the descaled hot boiled water.

7 Connect the appliance to the mains supply.

8 Press the On/Off button and wait for the Coffee Ready Light to illuminate.

9 Press the Coffee Dispense Button, water will flow through the unit.

10 Allow the pump to keep dispensing until the water tank is empty.

11 Discard the contents.

12 Repeat the process with cold water only to flush the system.

Troubleshooting

Problem	Reason	Solution
• Water is dispensing from the Steam Wand	• Steam Control is open	• Rotate the Steam Control so its closed
• The Coffee temperature is too cold	• Heater block is not hot enough before dispensing	• Before dispensing Coffee, make sure the ready light is illuminated.
• The Coffee grinds are wet after use	• Coffee is not compact enough	• Tamp the coffee before inserting.
• Espresso is weak	• Wrong Coffee Type	• Always use espresso coffee grinds
• Milk is not frothing	• Air and steam are not getting into the milk	• Use a pin to clean the Steam Wand nozzle and air holes in the cleaner
• Coffee is too strong or weak	• Wrong volume of coffee	• Use the correct coffee filter: 1 person - 7g 2 person 14g
• What is E.S.E, and where can I find them?	• Easy Serving Espresso, coffee within a teabag	• They are available online and in some supermarkets

Making coffee

Your Accents Espresso coffee machine allows you to create a variety of coffee drinks helping you to create the coffee shop experience in your own home. The diagrams on this page are a simple guide showing you the percentage of ingredients that make up each of the drink types. Please refer to the quick start guide at the front of this booklet on how to create the perfect espresso and frothy milk.

Espresso

Americano

Flat White

Espresso Macchiato

Espresso con Panna

Caffé Latte

Cappuccino

Caffé Mocha

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: **0844 871 0960**

IRE Helpline: **1800 409 119**

Spares: **0844 873 0726**

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: **www.morphyrichards.co.uk/blog**

Facebook: **www.facebook.com/morphyrichardsuk**

Twitter: **@loveyourmorphy**

Website: **www.morphyrichards.com**

CM47580 MUK Rev 5 11/13

Registering your 2 year guarantee

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at
www.morphyrichards.co.uk
Or call our customer registration line
UK 0844 871 0962
IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

Your 1 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.

2 The appliance has been used on a voltage supply other than that marked on the products.

3 Repairs have been attempted by persons other than our service staff (or authorised dealer).

4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion

7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

8 Batteries and damage from leakage are not covered by the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of it's models at any time.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

IF YOU ARE HAVING A PROBLEM WITH ONE OF OUR PRODUCTS, CALL OUR HELPLINE:

UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119
www.morphyrichards.com

CE